



A1	Instrument cluster	31L	PE54.30
A1e27	ADS MIL	31L	
B24	Body acceleration sensor	20L	
B24/1	Wheel acceleration sensor	22L	
B24x1	Body acceleration sensor connector	19J	
F1	Fuse and relay box	14L	B.4
F1c	Fuse C	14K	
N30/1	ABS/ASR control module	29L	
N49	Steering angle sensor	9L	
N51	ADS suspension control module	4A 12A 20A 28A	
S44	Oil level switch (ADS)	18L	
S45/1	Comfort/sport switch (ADS)	6L	
W12	Ground (center console)	13H	
W16	Ground (component compartment)	5E 18H	
X4/10	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	3E	B.1/1

X11/4	Diagnostic test clutch	30H	B.1/5 B.1/15
X30	Accessory equipment connector block (5-pole)	11L	B.1/2
X33/5	ADS connector (front/rear suspension) (4-pole)	23E	B.1/7 B.1/22
X33/6	ADS connector (front/rear suspension) (8-pole)	3G	B.1/7 B.1/22
X33/12	ADS/interior connector (3-pole)	29E	
X35	Cockpit/module box separation point (12-pole)	30H	B.1/18
X62/6	Right front axle distributor connector (component compartment)	21E	B.1/1
X62/15	Right front axle VSS sensor connector (axle spindle)	21H	B.1/12
Y51	Left front axle damper valve assembly	15L	
Y51x1	Damper valve assembly connector	15J	
Y51y1	Solenoid valve 1	16L	

Y51y2	Solenoid valve 2	15L	
Y52	Right front axle damper valve assembly	17L	
Y52x1	Damper valve assembly connector	16J	
Y52y1	Solenoid valve 1	17L	
Y52y2	Solenoid valve 2	16L	
Y53	Left rear axle damper valve assembly	24L	
Y53x1	Damper valve assembly connector	23J	
Y53y1	Solenoid valve 1	24L	
Y53y2	Solenoid valve 2	23L	
Y54	Right rear axle damper valve assembly	25L	
Y54x1	Damper valve assembly connector	25J	
Y54y1	Solenoid valve 1	26L	
Y54y2	Solenoid valve 2	25L	
Z88	LF VSS sensor connector sleeve feed from traction system control modules	29G	

	PE 00.19-2010 Left front axle speed signal
	PE 00.19-2740 Circuit 87L voltage distribution
	PE 00.19-2750 Circuit 61e voltage distribution