

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	7L	PE54.30
<u>A1q8</u>	Electronic speedometer	8L	
<u>A2</u>	Radio	12L	PE82.60
<u>L6/1</u>	Left front VSS	2L	PE42.40
<u>N4/1</u>	EA/CC/ISC control module	7A	
<u>N4/3</u>	CC/ISC control module	6A	
<u>N10</u>	Combination relay (turn/hazard signal, heated rear window, wiper motor)	10L	
<u>N22</u>	AAC pushbutton control module	10A	
<u>N47-1</u>	ASR/SPS control module	2A	PE42.40
<u>N47-2</u>	ETS/SPS control module	2A	
<u>N51</u>	ADS suspension control module	4L	
<u>N52</u>	Power soft top control module	5L	
<u>X1/8</u>	Taillamp harness, radio/sound system connector	12H	
<u>X18</u>	Interior/taillamp harness connector (12-pole)	11E	B.1/4
<u>X33/12</u>	ADS/interior connector (3-pole)	3H	
<u>X35</u>	Cockpit/module box separation point (12-pole)	6H	B.1/18
<u>X35/16</u>	Module box/taillamp harness separation point (13-pole)	5H	B.1/18
<u>X62/7</u>	Left front axle distributor connector (component compartment)	1E	B.1/5
<u>X62/14</u>	Left front axle VSS sensor connector (axle spindle)	1H	B.1/12
<u>X85/2</u>	Heater/interior connector (12-pole)	10E	B.1/5
<u>Z88</u>	LF VSS sensor connector sleeve feed from traction system control modules	6E	