

Designation	Description	Coordinates	Reference
<u>L6/2</u>	Right front VSS	2L	PE42.40
<u>N16/1</u>	Base module (BM)	4L	
<u>N47-1</u>	ASR/SPS control module	3A	PE42.40
<u>N47-2</u>	ETS/SPS control module	3A	
<u>X62/6</u>	Right front axle distributor connector (component compartment)	1E	B.1/1
<u>X62/15</u>	Right front axle VSS sensor connector (axle spindle)	1H	B.1/12