

Designation	Description	Coordinates	Reference
<u>A7</u>	ABS hydraulic unit (---A7/3---)	11L	
<u>A7/3</u>	Traction system hydraulic unit	11L 14L	
<u>A7/3k1</u>	Solenoid valve relay	12K 14K	
<u>A7/3k2</u>	High-pressure/return pump relay	12K 14K	
<u>A7k1</u>	Solenoid valve relay	12K	
<u>A7k2</u>	Return pump/pressure pump relay	12K	
<u>C2</u>	Electrolytic capacitor (generator/battery harness noise suppressor)	9L	
<u>G1</u>	Battery	6A	
<u>G2</u>	Generator	6L	PE15.00
<u>K1/2</u>	Overvoltage protection relay module (87E/87L/30a, 9-pole) (Series K1/1)	3A	
<u>K9/1</u>	Auxiliary fan relay module (stage 1)	12A	
<u>K10</u>	Auxiliary fan relay module (stage 2)	13A	
<u>M1</u>	Starter	3L 10A	
<u>N3/4</u>	HFM-SFI control module	5A	B.2/2
<u>N16</u>	Engine systems control module	8A	
<u>N16/1</u>	Base module (BM)	2L	
<u>N47-2</u>	ETS/SPS control module	15A	
<u>N59/1</u>	Diagnostic module (OBD II)	16L	
<u>S2/1</u>	Ignition/starter switch	2A	PE15.00
<u>W10</u>	Ground (battery)	7D	
<u>W16/2</u>	Ground (component compartment - generator/battery harness noise suppressor)	8H	
<u>X4</u>	Terminal block (circuit 30, fuse and relay box) (2-pole)	5H	B.1/4
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	3E	B.1/1
*U27	15.00 Electrical system, engine	0	