

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	3L	PE54.30
<u>A1q1</u>	ECT gauge	4L	
<u>A1g</u>	Knock sensors	27L	
<u>A1gq1</u>	KS 1 (right side of engine)	27L	
<u>A1gq2</u>	KS 2 (left side of engine)	28L	
<u>A1gk1</u>	KS connector	19K 26J	
<u>B2/5</u>	Hot film MAF sensor	33L	
<u>B11</u>	ECT sensor	29L	
<u>B13</u>	ECT gauge sensor	6L	
<u>B17</u>	IAT sensor	30L	
<u>F1</u>	Fuse and relay box	2L	B.4
<u>F1f5</u>	Fuse 5	2K	
<u>F1fB</u>	Fuse B	2K	
<u>L5</u>	CKP sensor	32L	
<u>L5/1</u>	CMP sensor	26L	
<u>L5x1</u>	CKP sensor connector	31H	
<u>N3/4</u>	HFM-SFI control module	4A 12A 20A 28A 34A	B.2/2
<u>N4/1</u>	EA/CC/ISC control module	35L	
<u>N16/1</u>	Base module (BM)	36L	
<u>R4</u>	Spark plugs	21L 22L 23L 24L 25L	
<u>T1/1</u>	Ignition coil (cylinder 1)	21J	
<u>T1/2</u>	Ignition coil (cylinder 2)	22J	
<u>T1/3</u>	Ignition coil (cylinder 3)	24J	
<u>W2</u>	Ground (at right headlamp unit)	19G	
<u>W27</u>	Ground (control module box/module box)	34G	
<u>X26</u>	Interior/engine connector (12-pole)	1E	B.1/1
<u>X26/2</u>	Engine separation point connector	5E	B.1/1 B.1/15
<u>X35/26</u>	Module box/engine separation point	34E	B.1/18
<u>Y22/6</u>	Shifting induction pipe switchover valve	7L	
<u>Y27</u>	EGR switchover valve	9L	
<u>Y32</u>	Air pump switchover valve	18L	
<u>Y33</u>	Electromagnetic AIR pump clutch	19L	
<u>Y49</u>	Adjustable camshaft timing solenoid	8L	
<u>Y58/1</u>	Purge control valve	5L	
<u>Y62</u>	Fuel Injectors	14L	
<u>Y62v1</u>	Valve (cylinder 1)	11L	
<u>Y62v2</u>	Valve (cylinder 2)	12L	
<u>Y62v3</u>	Valve (cylinder 3)	13L	
<u>Y62v4</u>	Valve (cylinder 4)	15L	
<u>Y62v5</u>	Valve (cylinder 5)	16L	
<u>Y62v6</u>	Valve (cylinder 6)	17L	
<u>Z3/4</u>	Circuit 15 (unfused) connector sleeve (feed from ignition/starter switch - S2/1)	12G	
<u>Z6/1</u>	Ground (W3) connector sleeve (feed from W3)	30G	
<u>Z7/25</u>	Circuit 87 (unfused) connector sleeve (HFM-SFI/base module)	35G	
<u>Z9</u>	Connector sleeve 1	6G 22G	
*U114	54.21-2400 Base module	0	