

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	9A	PE54.30
<u>A1e5</u>	Generator charge indicator lamp	10A	
<u>C2</u>	Electrolytic capacitor (generator/battery harness noise suppressor)	4L	
<u>F1</u>	Fuse and relay box	8L 12A	B.4
<u>F1f5</u>	Fuse 5	11B	
<u>F1f8</u>	Fuse 8	8K	
<u>F20</u>	Rear auxiliary fuse box (trunk)	1L	
<u>G1</u>	Battery	2A	
<u>G2</u>	Generator	6A	
<u>K24</u>	CF relay module	19L	
<u>K38</u>	Starter lock-out relay module	9L	
<u>M1</u>	Starter	6L	
<u>M14/1</u>	Supply pump (CL/vacuum)	15L	
<u>N3/4</u>	HFM-SFI control module	27A	B.2/2
<u>N4/1</u>	EA/CC/ISC control module	31A	
<u>N4/3</u>	CC/ISC control module	29A	
<u>N26</u>	ATA control module	12L	
<u>N35</u>	Daytime running lamp control module	18L	
<u>S1</u>	Exterior lamp switch	21L	
<u>S2/1</u>	Ignition/starter switch	15A	
<u>S16/1</u>	Starter lock-out/backup lamp switch	24L	
<u>W10</u>	Ground (battery)	3E	
<u>W11/1</u>	Ground (engine - ground strap)	4E	
<u>W16/2</u>	Ground (component compartment - generator/battery harness noise suppressor)	5L	
<u>W30</u>	Ground (left front longitudinal frame rail)	4A	
<u>X4</u>	Terminal block (circuit 30, fuse and relay box) (2-pole)	17H	B.1/4
<u>X4/5</u>	Terminal block (circuit 30, trunk - in auxiliary fuse holder F20) (1-pole)	1K	B.1/5
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	2H 18E	B.1/1
<u>X26/12</u>	Interior/transmission connector	23E	B.1/6 B.1/22
<u>X27</u>	Starter harness connector (5-pole)	7E	B.1/1
<u>X35</u>	Cockpit/module box separation point (12-pole)	30H	B.1/18
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	26H	B.1/18
<u>X42</u>	ATA connector (front/rear) (4-pole)	9H	
<u>X42/18</u>	Starter lock-out intermediate connector (terminal 50)	13K	B.1/14
*U134	00.19-2710 Circuit 61e voltage distribution	0	