

Designation	Description	Coordinates	Reference
<u>E1</u>	Fuse and relay box	4A	B.4
<u>E1f6</u>	Fuse 6	4B	
<u>K38</u>	Starter lock-out relay module	8A	
<u>M1</u>	Starter	10A	
<u>N3/4</u>	HFM-SFI control module	13A	B.2/2
<u>N4/1</u>	EA/CC/ISC control module	1A	
<u>N7</u>	Exterior lamp failure monitoring module	3A	
<u>N15/1</u>	Transmission control module (TCM) (5-speed automatic)	20A	
<u>N16/1</u>	Base module (BM)	12A	
<u>S2/1</u>	Ignition/starter switch	5A	PE15.00
<u>S16/1</u>	Starter lock-out/backup lamp switch	4L 9L	
<u>S16/6</u>	Kickdown switch	12L	
<u>S16/9</u>	Transmission range "D" contact switch (5-speed automatic transmission)	19L	
<u>S65</u>	Transmission overload protection switch	14L	
<u>W12</u>	Ground (center console)	14E	
<u>W27</u>	Ground (control module box/module box)	21E	
<u>X4</u>	Terminal block (circuit 30, fuse and relay box) (2-pole)	5E	B.1/4
<u>X4/10</u>	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	19H	B.1/1
<u>X11/4</u>	Diagnostic test clutch	20E	B.1/5 B.1/15
<u>X22/5</u>	5-speed AT/engine connector	16E	B.1/13
<u>X26/12</u>	Interior/transmission connector	2H	B.1/6 B.1/22
<u>X26/18</u>	Interior/transmission connector (8-pole)	11H	
<u>X27</u>	Starter harness connector (5-pole)	10E	B.1/1
<u>X35</u>	Cockpit/module box separation point (12-pole)	1E 15E	B.1/18
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	11E	B.1/18
<u>X42/18</u>	Starter lock-out intermediate connector (terminal 50)	7E	B.1/14
<u>Y3/1</u>	Valve block (5-speed AT)	17L	
<u>Y3/1x1</u>	Valve block connector (5-speed AT)	16J	
<u>Y3/1y1</u>	Kickdown solenoid valve	16L	
<u>Y3/1y2</u>	Control valve	17L	
*U37	00.19-2200 CAN-Bus engine	0	
*U137	00.19-2740 Circuit 87L voltage distribution	0	
*U27	15.00 Electrical system, engine	0	