

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	31L	PE54.30
<u>A1e27</u>	ADS MIL	31L	
<u>B24</u>	Body acceleration sensor	20L	
<u>B24/1</u>	Wheel acceleration sensor	22L	
<u>B24x1</u>	Body acceleration sensor connector	19J	
<u>E1</u>	Fuse and relay box	14L	B.4
<u>F1fC</u>	Fuse C	14K	
<u>N30/1</u>	ABS/ASR control module	29L	
<u>N49</u>	Steering angle sensor	9L	
<u>N51</u>	ADS suspension control module	4A 12A 20A 28A	
<u>S44</u>	Oil level switch (ADS)	18L	
<u>S45/1</u>	Comfort/sport switch (ADS)	6L	
<u>W12</u>	Ground (center console)	13H	
<u>W16</u>	Ground (component compartment)	5E 18H	
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	3E	B.1/1
<u>X11/4</u>	Diagnostic test clutch	30H	B.1/5 B.1/15
<u>X30</u>	Accessory equipment connector block (5-pole)	11L	B.1/2
<u>X33/5</u>	ADS connector (front/rear suspension) (4-pole)	23E	B.1/7 B.1/22
<u>X33/6</u>	ADS connector (front/rear suspension) (8-pole)	3G	B.1/7 B.1/22
<u>X33/12</u>	ADS/interior connector (3-pole)	29E	
<u>X35</u>	Cockpit/module box separation point (12-pole)	30H	B.1/18
<u>X62/6</u>	Right front axle distributor connector (component compartment)	21E	B.1/1
<u>X62/15</u>	Right front axle VSS sensor connector (axle spindle)	21H	B.1/12
<u>Y51</u>	Left front axle damper valve assembly	15L	
<u>Y51x1</u>	Damper valve assembly connector	15J	
<u>Y51y1</u>	Solenoid valve 1	16L	
<u>Y51y2</u>	Solenoid valve 2	15L	
<u>Y52</u>	Right front axle damper valve assembly	17L	
<u>Y52x1</u>	Damper valve assembly connector	16J	
<u>Y52y1</u>	Solenoid valve 1	17L	
<u>Y52y2</u>	Solenoid valve 2	16L	
<u>Y53</u>	Left rear axle damper valve assembly	24L	
<u>Y53x1</u>	Damper valve assembly connector	23J	
<u>Y53y1</u>	Solenoid valve 1	24L	
<u>Y53y2</u>	Solenoid valve 2	23L	
<u>Y54</u>	Right rear axle damper valve assembly	25L	
<u>Y54x1</u>	Damper valve assembly connector	25J	
<u>Y54y1</u>	Solenoid valve 1	26L	
<u>Y54y2</u>	Solenoid valve 2	25L	
<u>Z88</u>	LF VSS sensor connector sleeve feed from traction system control modules	29G	
*U131	00.19-2010 Left front axle speed signal	0	
*U137	00.19-2740 Circuit 87L voltage distribution	0	
*U136	00.19-2750 Circuit 61e voltage distribution	0	