

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	18L 29L	PE54.30
<u>A1e17</u>	ABS MIL	18L	
<u>A1e24</u>	ASD MIL	29L	
<u>A1e25</u>	ASD warning lamp	28L	
<u>A7</u>	ABS hydraulic unit (---A7/3---)	14L	
<u>A7k1</u>	Solenoid valve relay	13L	
<u>A7k2</u>	Return pump/pressure pump relay	15L	
<u>A7m1</u>	Return pump/pressure pump	16L	
<u>A7v1</u>	Left front wheel solenoid valve	11H	
<u>A7v2</u>	Right front wheel solenoid valve	11J	
<u>A7v3</u>	Rear axle solenoid valve	11J	
<u>F1</u>	Fuse and relay box	19L	B.4
<u>F1f5</u>	Fuse 5	19K	
<u>K1/2</u>	Overvoltage protection relay module (87E/87L/30a, 9-pole) (Series K1/1)	2L	
<u>L6</u>	Rear axle VSS sensor	5L	
<u>L6/1</u>	Left front VSS	7L	PE42.40
<u>L6/2</u>	Right front VSS	9L	PE42.40
<u>N4/2</u>	CC control module (with reference resistor)	22L	
<u>N7</u>	Exterior lamp failure monitoring module	21L	
<u>N30</u>	ABS control module	4A 12A 19A	
<u>N30/2</u>	ASD control module	22A 29A	
<u>N51</u>	ADS suspension control module	23L	
<u>N52</u>	Power soft top control module	25L	
<u>S9/1</u>	Stop lamp switch (4-pole)	20L 30L	PE42.40
<u>W14</u>	Ground (ABS hydraulic unit bracket)	17E	
<u>W16</u>	Ground (component compartment)	2E 22E	
<u>X2/3</u>	VSS connector (ABS/engine) (2-pole)	25H	
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	14E 24E 30E	B.1/1
<u>X11/4</u>	Diagnostic test clutch	28E	B.1/5 B.1/15
<u>X30/1</u>	Multi-function connector block	1H 17H 27H	B.1/5
<u>X47</u>	Rear axle VSS sensor harness connector (2-pole) (right footwell)	5E	B.1/3
<u>X62/5</u>	Valve connector (ASD) (2-pole)	31E	B.1/3
<u>X62/6</u>	Right front axle distributor connector (component compartment)	8E	B.1/1
<u>X62/7</u>	Left front axle distributor connector (component compartment)	6E	B.1/5
<u>X62/8</u>	Rear axle distributor connector	4H	B.1/2
<u>X62/14</u>	Left front axle VSS sensor connector (axle spindle)	6H	B.1/12
<u>X62/15</u>	Right front axle VSS sensor connector (axle spindle)	8H	B.1/12
<u>Y38</u>	ASD solenoid valve	32L	
<u>Y38x1</u>	ASD solenoid valve connector	31J	
<u>Z7</u>	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	2G	
<u>Z7/13</u>	Circuit 87E connector sleeve (feed from multi-function block)	1E 15E	
*U134	00.19-2710 Circuit 61e voltage distribution	0	
*U137	00.19-2740 Circuit 87L voltage distribution	0	
*U136	00.19-2750 Circuit 61e voltage distribution	0	
*U148	07.32 Fuel injection system KE	0	