

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	17L 30L	PE54.30
<u>A1e17</u>	ABS MIL	31L	
<u>A7</u>	ABS hydraulic unit (---A7/3---)	21L 26L	
<u>A7k1</u>	Solenoid valve relay	24L	
<u>A7k2</u>	Return pump/pressure pump relay	22L	
<u>A7m1</u>	Return pump/pressure pump	20L	
<u>A7v1</u>	Left front wheel solenoid valve	27J	
<u>A7v2</u>	Right front wheel solenoid valve	27J	
<u>A7v3</u>	Rear axle solenoid valve	27K	
<u>F1</u>	Fuse and relay box	9L 29L	B.4
<u>F1f15</u>	Fuse 15	9K 29K	
<u>L6</u>	Rear axle VSS sensor	12L	
<u>L6/1</u>	Left front VSS	32L	PE42.40
<u>L6/2</u>	Right front VSS	34L	PE42.40
<u>N4/3</u>	CC/SC control module	4L	
<u>N7</u>	Exterior lamp failure monitoring module	10L	
<u>N16/1</u>	Base module (BM)	2L	
<u>N30</u>	ABS control module	4A 12A 20A 28A 34A	
<u>N52</u>	Power soft top control module	16L 19L	
<u>S9/1</u>	Stop lamp switch (4-pole)	6L	PE42.40
<u>W14</u>	Ground (ABS hydraulic unit bracket)	20H	
<u>W27</u>	Ground (control module box/module box)	2E	
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	9E 24E	B.1/1
<u>X11/4</u>	Diagnostic test clutch	8E	B.1/5 B.1/15
<u>X35</u>	Cockpit/module box separation point (12-pole)	17H	B.1/18
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	5H 30H	B.1/18
<u>X35/15</u>	Module box/taillamp harness separation point	16H	B.1/18
<u>X35/16</u>	Module box/taillamp harness separation point (13-pole)	11E 18H	B.1/18
<u>X46/4</u>	ASR MIL terminal block (2-pole)	25E	
<u>X62/6</u>	Right front axle distributor connector (component compartment)	34E	B.1/1
<u>X62/7</u>	Left front axle distributor connector (component compartment)	32E	B.1/5
<u>X62/8</u>	Rear axle distributor connector	11H	B.1/2
<u>X62/14</u>	Left front axle VSS sensor connector (axle spindle)	32H	B.1/12
<u>X62/15</u>	Right front axle VSS sensor connector (axle spindle)	33H	B.1/12
<u>Z88</u>	LF VSS sensor connector sleeve feed from traction system control modules	16F 18F	
<u>Z94</u>	Stop lamp switch contact connector sleeve (feed from brake lamp switch - S9/1, n.o. contact)	7E	
<u>Z95</u>	Stop lamp switch contact connector sleeve (feed from brake lamp switch (S9/1), N.C. contact)	6E	
*U131	00.19-2010 Left front axle speed signal	0	
*U134	00.19-2710 Circuit 30 voltage distribution	0	
*U136	00.19-2750 Circuit 61e voltage distribution	0	