

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	7L 25L	PE54.30
<u>A1e7</u>	Low brake fluid level/parking brake indicator lamp	24L	
<u>A1e17</u>	ABS MIL	27L	
<u>A1e21</u>	ASR warning lamp	25L	
<u>A1e22</u>	ASR MIL	26L	
<u>A7/3</u>	Traction system hydraulic unit	30L 36L	
<u>A7/3k1</u>	Solenoid valve relay	32L	
<u>A7/3k2</u>	High-pressure/return pump relay	30L	
<u>A7/3m1</u>	High-pressure/return pump	28L	
<u>A7/3s1</u>	Pressure switch	36H	
<u>A7/3y1</u>	Left front axle solenoid valve	37H	
<u>A7/3y2</u>	Right front axle solenoid valve	37J	
<u>A7/3y3</u>	Left rear axle solenoid valve	37J	
<u>A7/3y4</u>	Right rear axle solenoid valve	37K	
<u>A7/3y5</u>	Switchover/solenoid valve	37K	
<u>F1</u>	Fuse and relay box	17L	B.4
<u>F1f5</u>	Fuse 5	18K	
<u>L6/1</u>	Left front VSS	42L	
<u>L6/2</u>	Right front VSS	43L	
<u>L6/3</u>	Left rear VSS	47L	
<u>L6/4</u>	Right rear VSS	45L	
<u>M15</u>	ASR/ESP charging pump	40L	
<u>N4/1</u>	EA/CC/ISC control module	10L	
<u>N7</u>	Exterior lamp failure monitoring module	17L	
<u>N16/1</u>	Base module (BM)	2L	
<u>N30/1</u>	ABS/ASR control module	4A 12A 20A 28A 36A 44A 49A	
<u>N52</u>	Power soft top control module	5L 8L	
<u>S9/1</u>	Stop lamp switch (4-pole)	13L	
<u>S12</u>	Parking brake switch	24L	
<u>S40</u>	CC pushbutton switch	16L	
<u>S40x1</u>	CC pushbutton switch connector	15J	B.1/4
<u>S76</u>	ASR snow chain switch (with indicator)	22L	
<u>W1</u>	Main ground (behind instrument cluster)	24H	
<u>W12</u>	Ground (center console)	21H	
<u>W27</u>	Ground (control module box/module box)	3E 40H	
<u>X4/10</u>	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	21E 31E	B.1/1
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	20H	B.1/4
<u>X11/4</u>	Diagnostic test clutch	15E	B.1/5 B.1/15
<u>X35</u>	Cockpit/module box separation point (12-pole)	7H 22F	B.1/18
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	12H 27H	B.1/18
<u>X35/15</u>	Module box/taillamp harness separation point	5H	B.1/18
<u>X35/16</u>	Module box/taillamp harness separation point (13-pole)	8H 45E	
<u>X46/4</u>	ASR MIL terminal block (2-pole)	33E	
<u>X62/6</u>	Right front axle distributor connector (component compartment)	43E	B.1/1
<u>X62/7</u>	Left front axle distributor connector (component compartment)	41E	B.1/5
<u>X62/8</u>	Rear axle distributor connector	44J	B.1/2
<u>X62/14</u>	Left front axle VSS sensor connector (axle spindle)	41H	B.1/12
<u>X62/15</u>	Right front axle VSS sensor connector (axle spindle)	43H	B.1/12
<u>Z7/1</u>	Circuit 30 connector sleeve (feed from ASR hydraulic unit)	35E	
<u>Z88</u>	LF VSS sensor connector sleeve feed from traction system control modules	5F 8F	
<u>Z99/1</u>	Circuit 87 connector sleeve (traction systems)	1E 12E	
*U37	00.19-2200 CAN-Bus engine	0	
*U134	00.19-2710 Circuit 30 voltage distribution	0	
*U136	00.19-2750 Circuit 61e voltage distribution	0	
*U34	82.20-2000 Interior lighting	0	