

Designation	Description	Coordinates	Reference
<u>F1</u>	Fuse and relay box	2L	B.4
<u>F1f4</u>	Fuse 4	2K	
<u>M20</u>	ESC motor	8L	
<u>M20m1</u>	Telescopic adjustment motor (in/out)	9L	
<u>M20m2</u>	Tilt adjustment motor (up/down)	6L	
<u>M21/3</u>	Electrically adjustable inside rearview mirror (with memory)	4L	
<u>N32/1</u>	Left front ESA control module (with memory)	3L	
<u>N32/9</u>	MSC control module (with memory)	4A 11A	
<u>S59</u>	ESC switch	12L	
<u>S59s1</u>	Steering column in/out	13K	
<u>S59s2</u>	Steering column up/down	11K	
<u>W1</u>	Main ground (behind instrument cluster)	4E 12E	
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	1H	B.1/4
<u>X54/6</u>	ESC connector (2-pole)	1E	B.1/4
<u>X54/7</u>	ESC control module/motor connector (8-pole)	5H	B.1/3
<u>X54/8</u>	ESC control module/switch connector (6-pole)	11H	B.1/3