

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	1A 25L	PE54.30
<u>A1e17</u>	ABS MIL	21L	
<u>A1e21</u>	ASR warning lamp	22L	
<u>A1e22</u>	ASR MIL	23L	
<u>A1e27</u>	ADS MIL	28L	
<u>A1e8</u>	Electronic speedometer	1A	
<u>A2</u>	Radio	4A	PE82.60
<u>A2/4</u>	Radio control module	4A	
<u>A7/3</u>	Traction system hydraulic unit	24A	
<u>E1</u>	Fuse and relay box	8L 29G	B.4
<u>F1f5</u>	Fuse 5	9K	
<u>F1f6</u>	Fuse 6	30G	
<u>F1fB</u>	Fuse B	8K	
<u>K1/2</u>	Overvoltage protection relay module (87E/87L/30a, 9-pole) (Series K1/1)	9A	
<u>N3</u>	Injection system control module	6A	
<u>N4/1</u>	EA/CC/ISC control module	13A 26A	
<u>N7</u>	Exterior lamp failure monitoring module	31L	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	2L	
<u>N15/1</u>	Transmission control module (TCM) (5-speed automatic)	7A	
<u>N16</u>	Engine systems control module	8A 16A	
<u>N22</u>	AAC pushbutton control module	5A	
<u>N30/1</u>	ABS/ASR control module	21A	
<u>N51</u>	ADS suspension control module	28A	
<u>N52</u>	Power soft top control module	3A 15A 17A	
<u>S9/1</u>	Stop lamp switch (4-pole)	19L	PE42.40
<u>S16/1</u>	Starter lock-out/backup lamp switch	30A	
<u>W16</u>	Ground (component compartment)	23E	
<u>X2/3</u>	VSS connector (ABS/engine) (2-pole)	14E 17E	
<u>X18</u>	Interior/taillamp harness connector (12-pole)	3E	B.1/4
<u>X25/12</u>	Interior/transmission connector	29E	B.1/6 B.1/22
<u>X30/1</u>	Multi-function connector block	5H	B.1/5
<u>X85/2</u>	Heater/interior connector (12-pole)	4E	B.1/7
<u>Z3</u>	Circuit 15 connector sleeve (feed from multi-function block)	13E	
<u>Z7</u>	Circuit 87/87E connector sleeve (feed from base module LH-SFI, N16/1, overvoltage protection relay CFI and HFM-SFI, K1, K1/1, K1/2)	11E	
<u>Z7/13</u>	Circuit 87E connector sleeve (feed from multi-function block)	20E	
<u>Z23</u>	ABS MIL connector sleeve (feed from ASR control module)	21E	
*U148	07.32 Fuel injection system KE	0	