

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	8L	PE54.30
<u>B2/5</u>	Hot film MAF sensor	16L	
<u>F1</u>	Fuse and relay box	6L 28L	B.4
<u>F1f5</u>	Fuse 5	6K	
<u>F1f9</u>	Fuse 9	7K	
<u>F1fB</u>	Fuse B	28K	
<u>G3/1x1</u>	O2S 2 connector (after TWC)	26J	
<u>G3/2</u>	O2S 1 (before TWC)	27L	
<u>K46</u>	Emergency alarm system	25L	
<u>M2/2</u>	Module box blower motor	30L	
<u>N3/4</u>	HFM-SFI control module	15L 23L	
<u>N4/1</u>	EA/CC/ISC control module	13L	
<u>N4/3</u>	CC/ISC control module	11L	
<u>N16/1</u>	Base module (BM)	4A 12A 19A 28A	
<u>N16/1f1</u>	Base module fuse (F1 - 10A)	9A	
<u>N16/1f2</u>	Base module fuse (F2 - 10A)	10A	
<u>N16/1f3</u>	Base module fuse (F3 - 10A)	11A	
<u>N30</u>	ABS control module	19L	
<u>N30/1</u>	ABS/ASR control module	22L	
<u>N47-1</u>	ASR/SPS control module	22L	PE42.40
<u>N59/1</u>	Diagnostic module (OBD II)	9L	
<u>S9/1</u>	Stop lamp switch (4-pole)	17L 20L	PE42.40
<u>S19/7</u>	Kickdown switch (transmission mode)	29L	
<u>W15</u>	Ground (electronics output ground - right footwell)	4E	
<u>W27</u>	Ground (control module box/module box)	30H	
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	2H	B.1/1
<u>X11/4</u>	Diagnostic test clutch	8E	B.1/5 B.1/15
<u>X26/18</u>	Interior/transmission connector (8-pole)	28H	
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	5G 17G 20G 27E	B.1/18
<u>X35/15</u>	Module box/taillamp harness separation point	26G	B.1/18
<u>X35/26</u>	Module box/engine separation point	16H	B.1/18
<u>Z7/25</u>	Circuit 87 (unfused) connector sleeve (HFM-SFI/base module)	16E	
<u>Z92</u>	TNA-signal connector sleeve (feed from base module - N16/1)	11E	
<u>Z99/1</u>	Circuit 87 connector sleeve (traction systems)	20E	
*U134	00.19-2710 Circuit 30 voltage distribution	0	
*U137	00.19-2740 Circuit 87L voltage distribution	0	