

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	21L 27L	PE54.30
<u>A1e29</u>	RB MIL	28L	
<u>E1</u>	Fuse and relay box	2L	B.4
<u>E1f37</u>	Fuse 37	2K	
<u>N1/3</u>	DI/KSS control module	40L	
<u>N1/4</u>	Left DI/KSS control module	44L	
<u>N1/5</u>	Right DI/KSS control module	43L	
<u>N2/2</u>	SRS control module	4L	PE91.60
<u>N3/1</u>	LH-SFI control module	50L	
<u>N3/2</u>	Left LH-SFI control module	22L 51L	
<u>N3/3</u>	Right LH-SFI control module	51L	
<u>N3/4</u>	HFM-SFI control module	53L	B.2/2
<u>N3/10</u>	ME-SFI control module	46L 55L 66L 68L	PE07.61
<u>N3/11</u>	Left ME-SFI control module	48L	
<u>N3/12</u>	Right ME-SFI control module	55L 66L	
<u>N4/1</u>	EA/CC/ISC control module	34L	
<u>N4/3</u>	CC/ISC control module	34L	
<u>N15/1</u>	Transmission control module (TCM) (5-speed automatic)	7L	
<u>N15/3</u>	ETC control module	9L	
<u>N16/1</u>	Base module (BM)	3L 17L	
<u>N22</u>	AAC pushbutton control module	13L	
<u>N26</u>	ATA control module	11L	
<u>N30</u>	ABS control module	29L	
<u>N30/2</u>	ASD control module	25L	
<u>N33/1</u>	STH/auxiliary heater control module	29L	
<u>N47/1</u>	ASR/SPS control module	31L	PE42.40
<u>N47/2</u>	ETS/SPS control module	31L	
<u>N47/5</u>	ESP/SPS/BAS control module	33L	
<u>N48</u>	BAS control module	19L	
<u>N51</u>	ADS suspension control module	63L	
<u>N52</u>	Power soft top control module	24L	
<u>N53</u>	RB control module (crash deployment)	26L	
<u>N54</u>	RCL control module	14L	
<u>N54/4</u>	DAS radio frequency/infrared control module	16L	
<u>N59</u>	Diagnostic module (OBD I)	38L 42L	
<u>N59/1</u>	Diagnostic module (OBD II)	36L	
<u>N71</u>	Headlamp range adjustment control module	5L	
<u>W15/1</u>	Ground (electronics - right footwell)	2E	
<u>W27</u>	Ground (control module box/module box)	57H	
<u>X11/4</u>	Diagnostic test clutch	4A 12A 20A 28A 36A 44A 52A 61A 67A	B.1/5 B.1/15
<u>X11/14</u>	Diagnostic intermediate connector (DI) (2- or 4-pole)	39H 42H	
<u>X11/20</u>	Diagnostic intermediate connector (ATA, RCL, SRS [EDW, IFZ, SRS]) (4-pin, modular cabling)	4H 11H 14H	B.1/22
<u>X11/22</u>	Diagnostic module (OBD II) generic scan tool connector	58L	B.1/15
<u>X18/3</u>	Interior/tailamp harness connector (8-pole)	27H	B.1/4
<u>X22</u>	AT connector	8H	B.1/22
<u>X33/12</u>	ADS/interior connector (3-pole)	62H	
<u>X33/15</u>	ADS/ engine-chassis connector	62H	B.1/22
<u>X35</u>	Cockpit/module box separation point (12-pole)	12H	B.1/18
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	16H	B.1/18
<u>X35/15</u>	Module box/tailamp harness separation point	24H	B.1/18
<u>X35/16</u>	Module box/tailamp harness separation point (13-pole)	24H	B.1/18
<u>X95/1</u>	Module box connector (4-pin) California version, {{USA}}	41H	
<u>Z6/8</u>	Sensor ground connector sleeve	59G	
<u>Z7/26</u>	Circuit 30 connector sleeve (solder joint in harness)	1G 58G	
<u>Z20/7</u>	Shielding placed inside insulated tubing	44C	
<u>Z20/8</u>	Shielding placed inside insulated tubing	41C	
<u>Z92</u>	TNA-signal connector sleeve (feed from base module - N16/1)	65G	
*U44	07.61 ME-SFI	0	
*U114	54.21-2400 Base module	0	