

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	4A 12A 20A 28A 36A 45A 52A 60A 65A	
<u>A1e1</u>	Left turn signal indicator lamp	66A	
<u>A1e2</u>	Right turn signal indicator lamp	65A	
<u>A1e3</u>	High beam indicator lamp	16A	
<u>A1e4</u>	Fuel reserve indicator lamp	54A	
<u>A1e5</u>	Generator charge indicator lamp	22A	
<u>A1e6</u>	Brake pad wear indicator lamp	54A	
<u>A1e7</u>	Low brake fluid level/parking brake indicator lamp	59A	
<u>A1e8</u>	Instrument illumination	28A	
<u>A1e9</u>	Seat belt/backrest lock reminder lamp	56A	
<u>A1e11</u>	Low ECL indicator lamp	20A	
<u>A1e12</u>	Low engine oil level indicator lamp	53A	
<u>A1e13</u>	Low windshield washer fluid level indicator lamp	18A	
<u>A1e14</u>	Exterior lamp failure indicator lamp	15A	
<u>A1e17</u>	ABS MIL	23A	
<u>A1e29</u>	RB MIL	18A	
<u>A1h1</u>	Warning buzzer	30C	
<u>A1h2</u>	Audible turn signal indicator	66A	
<u>A1p1</u>	ECT gauge	14A	
<u>A1p2</u>	Fuel level gauge	30C	
<u>A1p3</u>	Engine oil pressure gauge with warning lamp	52A	
<u>A1p4</u>	Outside temperature indicator	49C	
<u>A1p5</u>	Tachometer	47C	
<u>A1p6</u>	Electronic clock	49C	
<u>A1p8</u>	Electronic speedometer	32C	
<u>A1p10</u>	Fuel consumption indicator	32C	
<u>A1r1</u>	Instrument illumination rheostat	27A	
<u>A7</u>	ABS hydraulic unit (---A7/3---)	21L	
<u>A7/3</u>	Traction system hydraulic unit	23L	
<u>A7/3k1</u>	Solenoid valve relay	21L 23L	
<u>B4</u>	Fuel level sensor	50L	
<u>B5</u>	Oil pressure sensor	47L 49L	
<u>B13</u>	ECT gauge sensor	14L	
<u>B14</u>	Outside temperature indicator temperature sensor	52L	
<u>E15</u>	Dome lamp (with shut-off delay and reading lamp)	7L	
<u>F1</u>	Fuse and relay box	2L 16L	B.4
<u>F1f1</u>	Fuse 1	2K	
<u>F1f5</u>	Fuse 5	3K	
<u>F1f9</u>	Fuse 9	1K	
<u>F1f16</u>	Fuse 16	16K	
<u>G2</u>	Generator	29L	
<u>L2</u>	Transmission inductive speed sensor	34L	
<u>M5/1</u>	Windshield washer pump	19L	
<u>N3/4</u>	HFM-SFI control module	43L	B.2/2
<u>N7</u>	Exterior lamp failure monitoring module	10L 15L 30L	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	39L 66L	
<u>N16/1</u>	Base module (BM)	42L	
<u>N30</u>	ABS control module	22L 36L	
<u>N30/1</u>	ABS/ASR control module	24L 36L 63L	
<u>N32/7</u>	Left backrest lock safety package	45L	
<u>N32/8</u>	Right backrest lock safety package	44L	
<u>N47-1</u>	ASR/SPS control module	25L 38L 63L	PE42.40
<u>N47-2</u>	ETS/SPS control module	25L 38L	
<u>N53</u>	RB control module (crash deployment)	16L	
<u>R3</u>	Front cigar lighter (with ashtray illumination)	13L	
<u>R3e1</u>	Illumination	13L	
<u>S1</u>	Exterior lamp switch	6J 12L	
<u>S2/1</u>	Ignition/starter switch	5L	PE15.00
<u>S10/1</u>	Left front brake lining wear sensor	53L	
<u>S10/1x1</u>	Left front brake lining wear sensor connector	53J 57J	
<u>S10/2</u>	Right front brake lining wear sensor	58L	
<u>S10/3</u>	Left rear brake lining wear sensor	55L	
<u>S10/3x1</u>	Left rear brake lining wear sensor connector	54J	
<u>S10/4</u>	Right rear brake lining wear sensor	57L	
<u>S10/4x1</u>	Right rear brake lining wear sensor connector	56J	
<u>S11</u>	Brake fluid level switch	59L	
<u>S12</u>	Parking brake switch	60L	
<u>S17/3</u>	Left front door switch	8L	
<u>S17/4</u>	Right front door switch	9L	
<u>S41</u>	ECL switch	20L	
<u>S42</u>	Windshield washer fluid level switch	18L	
<u>S43</u>	Oil level switch	46L	
<u>W1</u>	Main ground (behind instrument cluster)	2H 21H 53H 58G	
<u>W2</u>	Ground (at right headlamp unit)	19H	
<u>W12</u>	Ground (center console)	13H	
<u>W17</u>	Ground (right rear seat)	56G	
<u>W18</u>	Ground (left front seat crossmember)	8H	
<u>W19</u>	Ground (right front seat crossmember)	10H	
<u>X4</u>	Terminal block (circuit 30, fuse and relay box) (2-pole)	5H	B.1/4
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	31H	B.1/1
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	27H	B.1/4
<u>X11/4</u>	Diagnostic test clutch	16E	B.1/5

<u>X18</u>	Interior/taillamp harness connector (12-pole)	8H 44H	B.1/15
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	18G 50H	B.1/4
<u>X24</u>	Headlamp harness connector	17H	B.1/1
<u>X26</u>	Interior/engine connector (12-pole)	14F	B.1/1
<u>X26/2</u>	Engine separation point connector	13H	B.1/1 B.1/15
<u>X26/12</u>	Interior/transmission connector	33G	B.1/6 B.1/22
<u>X27</u>	Starter harness connector (5-pole)	29H 45H	B.1/1
<u>X35</u>	Cockpit/module box separation point (12-pole)	36G 37G 62H	B.1/18
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	16H 23F 42G	B.1/18
<u>X46/4</u>	ASR MIL terminal block (2-pole)	22H	
<u>X62/8</u>	Rear axle distributor connector	54J	B.1/2
<u>X67</u>	Outside temperature indicator connector (2-pole)	51H	B.1/1
<u>X88/6</u>	Left rear brake pad wear sensor connector (2-pole)	55G	B.1/7
<u>Z88</u>	LF VSS sensor connector sleeve feed from traction system control modules	36H 37H	
<u>Z92</u>	TNA-signal connector sleeve (feed from base module - N16/1)	42H	
*U29	00.19-2000 Front axle VSS	0	
*U136	00.19-2750 Circuit 61e voltage distribution	0	
*U27	15.00 Electrical system, engine	0	
*U154	54.30-2000C Instrument cluster (A1)	0	
*U34	82.20-2000 Interior lighting	0	