

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	5A 12A 17A	
<u>A1e15</u>	SRS MIL and control	14A	
<u>A1e21</u>	ASR warning lamp	3A	
<u>A1e24</u>	ASD MIL	4A	
<u>A1e26</u>	"CHECK ENGINE" MIL	9A	
<u>A1e35</u>	ETS MIL	4A	
<u>A1e36</u>	ETS warning lamp	3A	
<u>A7/3</u>	Traction system hydraulic unit	3L	
<u>F1</u>	Fuse and relay box	15L 18L	B.4
<u>F1f12</u>	Fuse 12	15K 18K	
<u>N2/2</u>	SRS control module	12L 17L	PE91.60
<u>N30/1</u>	ABS/ASR control module	2L	
<u>N47-1</u>	ASR/SPS control module	5L	PE42.40
<u>N47-2</u>	ETS/SPS control module	5L	
<u>N59/1</u>	Diagnostic module (OBD II)	9L	
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	8H	B.1/1
<u>X11/4</u>	Diagnostic test clutch	10G	B.1/5 B.1/15
<u>X11/13</u>	SRS test connector (10-pole)	13K	B.1/3
<u>X11/20</u>	Diagnostic intermediate connector (ATA, RCL, SRS [EDW, IFZ, SRS]) (4-pin, modular cabling)	10H	B.1/22
<u>X28/2</u>	SRS voltage supply connector (2-pole)	12H 16H	B.1/4
<u>X35</u>	Cockpit/module box separation point (12-pole)	2H	B.1/18
<u>X46/4</u>	ASR MIL terminal block (2-pole)	3H 5H	
<u>X95/4</u>	Cockpit /diagnostic module (OBD II) connector	8E	
*U137	00.19-2740 Circuit 87L voltage distribution	0	
*U153	54.30-2000B Instrument cluster	0	