

Designation	Description	Coordinates	Reference
<u>E1</u>	Fuse and relay box	7L	B.4
<u>E1f12</u>	Fuse 12	7K	
<u>E19</u>	Front auxiliary fuse box (4-fuse)	2L	
<u>E19f3</u>	Fuse 3	2K	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	5A 9A	
<u>R1</u>	Rear window defroster element	5L	
<u>S14</u>	Rear window defroster switch	8L	
<u>U19</u>	Valid with module box	5D	
<u>W1</u>	Main ground (behind instrument cluster)	8H	
<u>W6</u>	Ground (left wheelhousing in trunk)	3E	
<u>W13/1</u>	Ground (at left of hardtop - rear window defroster)	3K	
<u>W13/2</u>	Ground (at right of hardtop - rear window defroster)	5H	
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	9E	B.1/4
<u>X18</u>	Interior/taillamp harness connector (12-pole)	4E 5E	B.1/4
<u>X19</u>	Rear window defroster connector	3H	B.1/6
*U34	82.20-2000 Interior lighting	6	