

Designation	Description	Coordinates	Reference
<u>E1</u>	Fuse and relay box	2L	B.4
<u>E1f4</u>	Fuse 4	3K	
<u>M20</u>	ESC motor	9L	
<u>M20m1</u>	Telescopic adjustment motor (in/out)	9L	
<u>M20m2</u>	Tilt adjustment motor (up/down)	8L	
<u>M21/3</u>	Electrically adjustable inside rearview mirror (with memory)	6L	
<u>M21/3m1</u>	Mirror adjustment motor (up/down)	6K	
<u>M21/3m2</u>	Mirror adjustment motor (in/out)	6K	
<u>N32/1</u>	Left front ESA control module (with memory)	3L	
<u>N32/9</u>	MSC control module (with memory)	4A 8A	
<u>W1</u>	Main ground (behind instrument cluster)	4E	
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	2H	B.1/4
<u>X54/6</u>	ESC connector (2-pole)	2E	B.1/4
<u>X54/7</u>	ESC control module/motor connector (8-pole)	8H	B.1/3