

Designation	Description	Coordinates	Reference
<u>A7/5</u>	RB and power soft top hydraulic unit	5L	
<u>A7/5b1</u>	Overload protection thermocouple	6L	
<u>A7/5k1</u>	Hydraulic unit relay	5L	
<u>A7/5m1</u>	Hydraulic unit motor	4L	
<u>A7/5x1</u>	RB and power soft top hydraulic unit connector	3H	
<u>A22</u>	Left soft top fabric bow switch group	24L	
<u>A22s1</u>	Bow "closed" switch	25L	
<u>A22s2</u>	Bow "locked" switch	24L	
<u>A22x1</u>	Left soft top fabric bow switch group connector	24J	
<u>A23</u>	Right soft top fabric bow switch group	18L	
<u>A23s2</u>	Bow "locked" switch	19L	
<u>A23x1</u>	Right soft top fabric bow switch group connector	18J	
<u>A25</u>	Right soft top compartment cover switch group	11L	
<u>A25s2</u>	Cover "locked" switch	12L	
<u>A25x1</u>	Cover switch group connector	11J	
<u>E15</u>	Dome lamp (with shut-off delay and reading lamp)	40L	
<u>F1</u>	Fuse and relay box	39L	B.4
<u>F1f6</u>	Fuse 6	39K	
<u>F1f8</u>	Fuse 8	40K	
<u>F20</u>	Rear auxiliary fuse box (trunk)	1L 7L	
<u>F20f3</u>	Fuse 3	1K	
<u>F20f7</u>	Fuse 7	7K	
<u>M14/1</u>	Supply pump (CL/vacuum)	28L	
<u>N22</u>	AAC pushbutton control module	26L	
<u>N30</u>	ABS control module	45L	
<u>N30/1</u>	ABS/ASR control module	43L	
<u>N47-1</u>	ASR/SPS control module	47L	PE42.40
<u>N47-2</u>	ETS/SPS control module	48L	
<u>N52</u>	Power soft top control module	4A 12A 20A 28A 36A 44A	
<u>N53</u>	RB control module (crash deployment)	30L 41L	
<u>S21/2</u>	Right front power window switch (front center console)	34L	
<u>S83</u>	RB switch (manual operation)	37L	
<u>S83/1</u>	RB "retracted" switch	20L	
<u>S84</u>	Power soft top switch	32L	
<u>S84/1</u>	Left front soft top "locked" switch	22L	
<u>S84/1x1</u>	Left front soft top "locked" switch connector	22J	
<u>S84/2</u>	Right front soft top "locked" switch	23L	
<u>S84/2x1</u>	Right front soft top "locked" switch connector	23J	
<u>S84/3</u>	Soft top "open" switch (soft top in storage compartment)	18L	
<u>S84/3x1</u>	Soft top "open" switch connector (soft top in storage compartment)	17J	
<u>S84/4</u>	Soft top "closed" switch (reed contact as of 01/94)	17L	
<u>S84/4x1</u>	Soft top "closed" switch connector	16J	
<u>S84/5</u>	Soft top compartment "open" switch	19L	
<u>S84/6</u>	Soft top fabric bow "raised" switch	21L	
<u>S84/6x1</u>	Soft top fabric bow "raised" switch connector	21J	
<u>W6</u>	Ground (left wheelhousing in trunk)	20H 24H	
<u>W7</u>	Ground (right wheelhousing in trunk)	4G 19H	
<u>W17</u>	Ground (right rear seat)	2E 8H 13H	
<u>W19</u>	Ground (right front seat crossmember)	4E 23C 36H	
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	34E	B.1/4
<u>X11/4</u>	Diagnostic test clutch	2K	B.1/5 B.1/15
<u>X11/12</u>	Soft top control test connector	3E	B.1/3
<u>X18</u>	Interior/taillamp harness connector (12-pole)	39H	B.1/4
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	26E	B.1/4
<u>X23/1</u>	Power soft top lock limit switch connector	22E	B.1/6
<u>X23/7</u>	Power top connector (reed contact switch)	16E	B.1/23
<u>X35/15</u>	Module box/taillamp harness separation point	2H	B.1/18
<u>X35/16</u>	Module box/taillamp harness separation point (13-pole)	45E	B.1/18
<u>X65/2</u>	Heater/interior connector (12-pole)	26H	B.1/5
<u>Y55/1</u>	Left power soft top valve block (4 connections)	14L	
<u>Y55/1y1</u>	Soft top "closed"/fabric bow lock "closed" valve	12L	
<u>Y55/1y2</u>	Fabric bow "closed" valve	13L	
<u>Y55/1y3</u>	Fabric bow "open"/soft top compartment cover "closed" valve	14L	
<u>Y55/1y4</u>	Soft top compartment cover "open"/soft top compartment cover lock "open" valve	15L	
<u>Y56/1</u>	Right power soft top valve block (3 connections)	9L	
<u>Y56/1y1</u>	Soft top "open"/front lock "open" valve	8L	
<u>Y56/1y2</u>	RB "lower" valve	9L	
<u>Y56/1y3</u>	RB "raise" valve	10L	
<u>Z24</u>	ATA/CF connector sleeve (feed from CL system supply pump)	27E	
<u>Z81/4</u>	Circuit 58d connector sleeve (FFS)	35G	
<u>Z82/7</u>	CL element connector sleeve (RCL/ATA)	28E	
<u>Z88</u>	LF VSS sensor connector sleeve feed from traction system control modules	45F	
*U104	00.19-2010 Speed signal	0	
*U109	80.30 Remote central locking (RCL)	0	
*U57	80.50-2000 Anti-theft alarm (ATA)	0	
*U34	82.20-2000 Interior lighting	0	

