

Designation	Description	Coordinates	Reference
<u>A26/1</u>	Driver door IR receiver unit	39L	
<u>A26/2</u>	Passenger door IR receiver unit	41L	
<u>A26/3</u>	Trunk lid IR receiver unit	43L	
<u>E15</u>	Dome lamp (with shut-off delay and reading lamp)	23L	
<u>E18/1</u>	Trunk lamp	22L	
<u>E1</u>	Fuse and relay box	9L	B.4
		14L	
<u>E1f8</u>	Fuse 8	14K	
<u>F1fC</u>	Fuse C	9K	
<u>F20</u>	Rear auxiliary fuse box (trunk)	2L	
		30L	
		37L	
<u>F20f4</u>	Fuse 4	31K	
<u>F20f6</u>	Fuse 6	2K	
		37K	
<u>K38</u>	Starter lock-out relay module	12L	
<u>M14/1</u>	Supply pump (CL/vacuum)	4A	
		12A	
		20A	
		28A	
<u>N26</u>	ATA control module	36L	
<u>N52</u>	Power soft top control module	16L	
		25L	
<u>N53</u>	RB control module (crash deployment)	31A	
<u>N54</u>	RCL control module	36A	
		42A	
<u>S2/1</u>	Ignition/starter switch	29L	PE15.00
<u>S47</u>	Left front door actuator	26L	
<u>S48</u>	Right front door actuator	27L	
<u>S49</u>	Trunk lid lock actuator	4L	
<u>S85</u>	CL interior control switch	3L	
<u>S86</u>	ATA/CF microswitch	17L	
<u>S86x1</u>	ATA/CF microswitch connector	17K	
<u>S87</u>	Right front door switch group	19L	
<u>S87s1</u>	ATA/CF microswitch	18L	
<u>S87x1</u>	Right front door switch group connector	18K	
<u>S88</u>	Trunk lid switch group	20L	
<u>S88/1</u>	Rotary tumbler/trunk lid microswitch	21L	
<u>S88s1</u>	ATA/CF microswitch	20L	
<u>S88x1</u>	ATA/CF microswitch connector	20K	
<u>S88x2</u>	Connector, lock catch microswitch	21K	
<u>W1</u>	Main ground (behind instrument cluster)	29H	
<u>W6</u>	Ground (left wheelhousing in trunk)	21H	
<u>W7</u>	Ground (right wheelhousing in trunk)	3E	
		4H	
		20H	
		38E	
<u>W18</u>	Ground (left front seat crossmember)	17H	
		26H	
<u>W19</u>	Ground (right front seat crossmember)	3H	
		18H	
		27H	
<u>X11/4</u>	Diagnostic test clutch	45H	B.1/5 B.1/15
<u>X11/20</u>	Diagnostic intermediate connector (ATA, RCL, SRS [EDW, IFZ, SRS]) (4-pin, modular cabling)	45E	B.1/22
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	28H	B.1/4
<u>X18/14</u>	Interior/taillamp harness connector (CL/interior lamp) (2-pole)	22H	
<u>X23</u>	RB solenoid valve connector (2-pole)	31H	B.1/6
<u>X30</u>	Accessory equipment connector block (5-pole)	10L	B.1/2
<u>X42</u>	ATA connector (front/rear) (4-pole)	12J	
<u>Y57/1</u>	RB deployment solenoid	31L	
<u>Y65/1</u>	Vent switchover valve (CL system - driver door)	8L	
<u>Y65/2</u>	Vent switchover valve (CL system - front passenger door)	7L	
<u>Z24</u>	ATA/CF connector sleeve (feed from CL system supply pump)	17G	
<u>Z82/7</u>	CL element connector sleeve (RCL/ATA)	24G	
		34E	