

Designation	Description	Coordinates	Reference
<u>A2</u>	Radio	9L	PE82.60
<u>E3</u>	Left taillamp unit	4L	
<u>E3e4</u>	Stop lamp	4L	
<u>E15</u>	Dome lamp (with shut-off delay and reading lamp)	26L	
<u>E18/1</u>	Trunk lamp	22L	
<u>E33</u>	ATA status indicator	15L	
<u>F1</u>	Fuse and relay box	10G 40L	B.4
<u>F1f1</u>	Fuse 1	11G	
<u>F1f3</u>	Fuse 3	10G	
<u>F1f14</u>	Fuse 14	12G	
<u>F20</u>	Rear auxiliary fuse box (trunk)	1L 23L 29L	
<u>F20f4</u>	Fuse 4	23K	
<u>F20f5</u>	Fuse 5	1K	
<u>F20f6</u>	Fuse 6	29K	
<u>F20f8</u>	Fuse 8	40K	
<u>H3</u>	Alarm horn	6L	
<u>K38</u>	Starter lock-out relay module	38L	
<u>M14/1</u>	Supply pump (CL/vacuum)	23A 28A 35A	
<u>N7</u>	Exterior lamp failure monitoring module	5L	
<u>N26</u>	ATA control module	5A 12A 18A	
<u>N52</u>	Power soft top control module	17L 33L	
<u>N53</u>	RB control module (crash deployment)	21A	
<u>N64</u>	RCL control module	19L	
<u>S2/1</u>	Ignition/starter switch	41A	PE15.00
<u>S17/4</u>	Right front door switch	14L	
<u>S21/8</u>	Right front door "window down" limit switch	13L	
<u>S21/8x1</u>	Right front door "window down" limit switch connector	12J	
<u>S47</u>	Left front door actuator	27L	
<u>S48</u>	Right front door actuator	28L	
<u>S49</u>	Trunk lid lock actuator	32L	
<u>S62</u>	Engine hood switch (ATA)	7L	
<u>S62/8</u>	Center console compartment switch (ATA)	8L	
<u>S85</u>	CL interior control switch	30L	
<u>S86</u>	ATA/CF microswitch	34L 36L	
<u>S86s1</u>	ATA/CF microswitch	37L	
<u>S86x1</u>	ATA/CF microswitch connector	33K	
<u>S87</u>	Right front door switch group	35L	
<u>S87s1</u>	ATA/CF microswitch	35L	
<u>S87x1</u>	Right front door switch group connector	35K	
<u>S88/1</u>	Rotary tumbler/trunk lid microswitch	21L	
<u>S88/1x1</u>	Rotary tumbler/trunk lid microswitch connector	21K	
<u>S88x1</u>	ATA/CF microswitch connector	36K	
<u>W1</u>	Main ground (behind instrument cluster)	41E	
<u>W2</u>	Ground (at right headlamp unit)	6H	
<u>W6</u>	Ground (left wheelhousing in trunk)	4H 21H 28E	
<u>W7</u>	Ground (right wheelhousing in trunk)	2E 32H 37H	
<u>W12</u>	Ground (center console)	15H	
<u>W15/1</u>	Ground (electronics - right footwell)	7H	
<u>W17</u>	Ground (right rear seat)	8H	
<u>W18</u>	Ground (left front seat crossmember)	27H 34H	
<u>W19</u>	Ground (right front seat crossmember)	14H 28H 30H 35H	
<u>X11/4</u>	Diagnostic test clutch	13H	B.1/5 B.1/15
<u>X11/20</u>	Diagnostic intermediate connector (ATA, RCL, SRS) (4-pole, modular cabling)	12E	B.1/22
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	38E	B.1/4
<u>X18/14</u>	Interior/taillamp harness connector (CL/interior lamp) (2-pole)	25H	
<u>X23</u>	RB solenoid valve connector (2-pole)	24H	B.1/6
<u>X42</u>	ATA connector (front/rear) (4-pole)	10E 37H	
<u>X42/13</u>	ATA contact connector (radio) (1-pole)	9K	B.1/3
<u>Y57/1</u>	RB deployment solenoid	24L	
<u>Z10</u>	Circuit 54L connector sleeve (feed from exterior lamp monitoring unit circuit 54L)	3E	
<u>Z21/2</u>	Front door contact connector sleeve (switched ground feed from left front (S17/3) and right front (S17/4) door contact switches)	14E	
<u>Z24</u>	ATA/CF connector sleeve (feed from CL system supply pump)	33E	
<u>Z82/7</u>	CL element connector sleeve (RCL/ATA)	16G 25E	
*U31	82.10-2000 Exterior lighting	0	

