

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	13L	PE54.30
<u>A1e14</u>	Exterior lamp failure indicator lamp	16L	
<u>A1r1</u>	Instrument illumination rheostat	14L	
<u>A2/4</u>	Radio control module	4L	
<u>E1</u>	Left headlamp unit	49L	
<u>E1e1</u>	High beam	50L	
<u>E1e2</u>	Low beam	49L	
<u>E2</u>	Right headlamp unit	51L	
<u>E2e1</u>	High beam	51L	
<u>E2e2</u>	Low beam	51L	
<u>E3</u>	Left taillamp unit	32L	
<u>E3e2</u>	Tail/parking lamp	34L	
<u>E3e3</u>	Backup lamp	33L	
<u>E3e4</u>	Stop lamp	32L	
<u>E3e5</u>	Rear fog lamp	32L	
<u>E3e6</u>	Left hand side marker lamp	34L	
<u>E4</u>	Right taillamp unit	58L	
<u>E4e2</u>	Tail/parking lamp	57L	
<u>E4e3</u>	Backup lamp	57L	
<u>E4e4</u>	Stop lamp	57L	
<u>E4e6</u>	Right hand side marker lamp	58L	
<u>E5/1</u>	Left fog lamp	52L	
<u>E5/1x1</u>	Left fog lamp connector	52K	
<u>E5/2</u>	Right fog lamp	54L	
<u>E5/2x1</u>	Right fog lamp connector	53K	
<u>E15</u>	Dome lamp (with shut-off delay and reading lamp)	3L	
<u>E17/1</u>	Left footwell entrance/exit lamp	1A	
<u>E17/2</u>	Right footwell entrance/exit lamp	2A	
<u>E19/1</u>	Left license plate lamp	56L	
<u>E19/2</u>	Right license plate lamp	55L	
<u>E21</u>	Center high mounted stop lamp (CHMSL)	40L	
<u>E21x1</u>	CHMSL connector	38K	
<u>F1</u>	Fuse and relay box	19F 23F 27F 36E	B.4
<u>F1f1</u>	Fuse 1	23E	
<u>F1f2</u>	Fuse 2	21E	
<u>F1f3</u>	Fuse 3	20E	
<u>F1f5</u>	Fuse 5	19E 28E	
<u>F1f6</u>	Fuse 6	40E	
<u>F1f11</u>	Fuse 11	36E	
<u>F1f12</u>	Fuse 12	28E	
<u>F1f13</u>	Fuse 13	39E	
<u>F1f14</u>	Fuse 14	38E	
<u>F1f15</u>	Fuse 15	37E	
<u>F1f16</u>	Fuse 16	38E	
<u>F1fA</u>	Fuse A	27E	
<u>G2</u>	Generator	8L	PE15.00
<u>K24</u>	CF relay module	1L	
<u>N2/4</u>	Seat belt warning module (USA)	18L	
<u>N4/1</u>	EA/CC/ISC control module	44L	
<u>N7</u>	Exterior lamp failure monitoring module	14A 20A 28A 36A 44A 53A 58A	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	48L	
<u>N26</u>	ATA control module	31L	
<u>N32/8</u>	Right backrest lock safety package	8A	
<u>R3</u>	Front cigar lighter (with ashtray illumination)	4L 6L	
<u>R3e1</u>	Illumination	5L 6L	
<u>S1</u>	Exterior lamp switch	22L	
<u>S2/1</u>	Ignition/starter switch	25L	PE15.00
<u>S4</u>	Combination switch	37L	
<u>S4s2</u>	Headlamp flasher/high beam switch	36K	
<u>S4s3</u>	Low beam switch	36K	
<u>S4x1</u>	Combination switch connector	36J	B.1/4
<u>S9/1</u>	Stop lamp switch (4-pole)	43L	PE42.40
<u>S16/3</u>	Starter lock-out/backup lamp switch (transmission range recognition)	46L	
<u>S16/8</u>	Transmission mode "B" engagement switch	45L	
<u>S17/3</u>	Left front door switch	9A	
<u>S17/4</u>	Right front door switch	5A	
<u>S21/8</u>	Right front door "window down" limit switch	4A	
<u>S21/8x1</u>	Right front door "window down" limit switch connector	3C	
<u>S21/9</u>	Left front door "window down" limit switch	11A	
<u>S21/9x1</u>	Left front door "window down" limit switch connector	11C	
<u>S40</u>	CC pushbutton switch	41L	
<u>S40x1</u>	CC pushbutton switch connector	41H	B.1/4
<u>W1</u>	Main ground (behind instrument cluster)	21E	
<u>W2</u>	Ground (at right headlamp unit)	50H 54H	
<u>W6</u>	Ground (left wheelhousing in trunk)	18H 32H 56H 58H	
<u>W7</u>	Ground (right wheelhousing in trunk)	39H	
<u>W9</u>	Ground (at left headlamp unit)	49H 52H	
<u>W12</u>	Ground (center console)	5H 6H	
<u>W18</u>	Ground (left front seat crossmember)	10E	
<u>W19</u>	Ground (right front seat crossmember)	5E	
<u>X4</u>	Terminal block (circuit 30, fuse and relay box) (2-pole)	25E	B.1/4
<u>X4/10</u>	Terminal block (circuit 30/30U/61e/87L) (6-pole)	12H	B.1/1
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	13H	B.1/4
<u>X18</u>	Interior/taillamp harness connector (12-pole)	7E 40H	B.1/4
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	32H	B.1/4

<u>X18/9</u>	Taillamp harness connector (ATA, RCL) (12-pole)	30E	B.1/5
<u>X26/12</u>	Interior/transmission connector	46E	B.1/6 B.1/22
<u>X27</u>	Starter harness connector (5-pole)	7H	B.1/1
<u>X35/7</u>	Cockpit/module box separation point (18-pole)	44H	B.1/18
<u>Z10</u>	Circuit 54L connector sleeve (feed from exterior lamp monitoring unit circuit 54L)	31E	
<u>Z21/2</u>	Front door contact connector sleeve (switched ground feed from left front (S17/3) and right front (S17/4) door contact switches)	6B	
*U136	00.19-2750 Circuit 61e voltage distribution	0	
*U27	15.00 Electrical system, engine	0	
*U34	82.20-2000 Interior lighting	0	