

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	13A	PE54.30
<u>A1e1</u>	Left turn signal indicator lamp	13A	
<u>A1e2</u>	Right turn signal indicator lamp	12A	
<u>A1h2</u>	Audible turn signal indicator	12A	
<u>E3</u>	Left taillamp unit	9L	
<u>E3e1</u>	Turn signal lamp	9L	
<u>E4</u>	Right taillamp unit	11L	
<u>E4e1</u>	Turn signal lamp	10L	
<u>E6/1</u>	Left turn signal/side marker lamp (USA)	15L	
<u>E6/1e1</u>	Turn signal	15L	
<u>E6/1e2</u>	Side marker lamp (USA)	14L	
<u>E6/2</u>	Right turn signal/side marker lamp (USA)	11L	
<u>E6/2e1</u>	Turn signal	12L	
<u>E6/2e2</u>	Side marker lamp (USA)	12L	
<u>F1</u>	Fuse and relay box	2L 5L	B.4
<u>F1f6</u>	Fuse 6	5K	
<u>F1f9</u>	Fuse 9	2K	
<u>K39</u>	Horn relay module	6L	
<u>N7</u>	Exterior lamp failure monitoring module	13L	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	4A 10A	
<u>S4</u>	Combination switch	8L	
<u>S4s1</u>	Right/left turn signal switch	8K	
<u>S4x1</u>	Combination switch connector	7J	B.1/4
<u>S6</u>	Hazard flasher switch group/CL	3L	
<u>W1</u>	Main ground (behind instrument cluster)	2E	
<u>W2</u>	Ground (at right headlamp unit)	11H	
<u>W6</u>	Ground (left wheelhousing in trunk)	9H 11H	
<u>W9</u>	Ground (at left headlamp unit)	15H	
<u>W12</u>	Ground (center console)	3H	
<u>X18</u>	Interior/taillamp harness connector (12-pole)	9G	B.1/4
<u>X24</u>	Headlamp harness connector	12G	B.1/1