

| <u>Designation</u> | <u>Description</u> | <u>Coordinates</u> | <u>Reference</u> |
|--------------------|---|--------------------|------------------|
| <u>E1</u> | Fuse and relay box | 3A 11A | B.4 |
| <u>E1f1</u> | Fuse 1 | 3B | |
| <u>E1f9</u> | Fuse 9 | 11B | |
| <u>E1f11</u> | Fuse 11 | 10B | |
| <u>K2</u> | HCS relay module | 6L | |
| <u>M5/1</u> | Windshield washer pump | 8L | |
| <u>M5/2</u> | HCS pump | 1L | |
| <u>M6/2</u> | Left headlamp wiper motor | 5L | |
| <u>M6/2x1</u> | Left headlamp wiper motor connector | 4J | |
| <u>M6/3</u> | Right headlamp wiper motor | 3L | |
| <u>M6/3x1</u> | Right headlamp wiper motor connector | 2J | |
| <u>N10/2</u> | Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA) | 11L | |
| <u>S4</u> | Combination switch | 6A | |
| <u>S4s4</u> | Washer switch | 6B | |
| <u>S4x1</u> | Combination switch connector | 6D | B.1/4 |
| <u>S42</u> | Windshield washer fluid level switch | 9L | |
| <u>W1</u> | Main ground (behind instrument cluster) | 11F | |
| <u>W2</u> | Ground (at right headlamp unit) | 2F 9F | |
| <u>W9</u> | Ground (at left headlamp unit) | 4F 6F | |
| <u>X24</u> | Headlamp harness connector | 2E | B.1/1 |