

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	3A	PE54.30
<u>A1e8</u>	Instrument illumination	3A	
<u>A1r1</u>	Instrument illumination rheostat	2A	
<u>A2</u>	Radio	14A	PE82.60
<u>E12</u>	Transmission selector lever position illumination	5L	
<u>E13/4</u>	Eyeglasses compartment illumination	11L	
<u>E13/5</u>	Cassette compartment illumination	3L	
<u>E15</u>	Dome lamp (with shut-off delay and reading lamp)	5A	
<u>E20</u>	Exterior lamp switch illumination	6L	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	15A	
<u>N18/2</u>	AAC/TAC center and side air outlet pushbutton unit	9L	
<u>N22</u>	AAC pushbutton control module	12L	
<u>S14</u>	Rear window defroster switch	10A	
<u>S21/1</u>	Left front power window switch (front center console)	6A	
<u>S21/2</u>	Right front power window switch (front center console)	7A	
<u>S45/1</u>	Comfort/sport switch (ADS)	13L	
<u>S76</u>	ASR snow chain switch (with indicator)	14L	
<u>S83</u>	RB switch (manual operation)	8A	
<u>S84</u>	Power soft top switch	9A	
<u>S91</u>	Left front ESA switch group (with memory)	11A	
<u>S91e1</u>	Illumination	12A	
<u>S92</u>	Right front ESA switch group (with memory)	13A	
<u>S92e1</u>	Illumination	13A	
<u>W1</u>	Main ground (behind instrument cluster)	3E 6H 11C	
<u>W12</u>	Ground (center console)	4H	
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	6E 13E	B.1/4
<u>X30</u>	Accessory equipment connector block (5-pole)	8L	B.1/2
<u>X85/2</u>	Heater/interior connector (12-pole)	9E	B.1/5
<u>Z6/7</u>	Ground (W1) connector sleeve (feed from W1)	10G	
*U48	54.30 Instrument cluster	0	