

Designation	Description	Coordinates	Reference
<u>E1</u>	Fuse and relay box	2L 14L	B.4
<u>E1f8</u>	Fuse 8	14K	
<u>E1f11</u>	Fuse 11	2K	
<u>K2</u>	HCS relay module	12A	
<u>K26</u>	Wiper system relay module	5A	
<u>M5/1</u>	Windshield washer pump	11L	
<u>M6/1</u>	Wiper motor	4L	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	9A	
<u>R2/2</u>	Left heated windshield washer nozzle	15L	
<u>R2/3</u>	Right heated windshield washer nozzle	19L	
<u>R2/4</u>	Left heated washer nozzle hose	16L	
<u>R2/5</u>	Right heated washer nozzle hose	18L	
<u>R2/6</u>	Heated check valve	17E	
<u>R2/7</u>	Heated windshield washer pump hose	17L	
<u>S4</u>	Combination switch	9L	
<u>S4s4</u>	Washer switch	10K	
<u>S4s7</u>	Intermittent wiper switch	9K	
<u>S4s8</u>	Slow wiper switch	9K	
<u>S4s9</u>	Fast wiper switch	9K	
<u>S4x1</u>	Combination switch connector	8H	B.1/4
<u>S26/1</u>	Heated windshield washer system thermoswitch	16A	
<u>S42</u>	Windshield washer fluid level switch	13L	
<u>W1</u>	Main ground (behind instrument cluster)	2E 14E	
<u>W2</u>	Ground (at right headlamp unit)	12G	
<u>X24</u>	Headlamp harness connector	11E	B.1/1
<u>X68/7</u>	Left heated washer nozzle hose connector (1-pole)	15H	B.1/7
<u>X68/8</u>	Right heated washer nozzle hose connector (1-pole)	18H	B.1/17