

Designation	Description	Coordinates	Reference
<u>A2/3</u>	Tuner/amplifier (trunk)	15A 27A	
<u>A2/4</u>	Radio control module	4A 10A	
<u>E1</u>	Fuse and relay box	2L 14L	B.4
<u>E1f9</u>	Fuse 9	2K	
<u>E1fA</u>	Fuse A	2K	
<u>E1fC</u>	Fuse C	15K	
<u>E20</u>	Rear auxiliary fuse box (trunk)	12L	
<u>E20f6</u>	Fuse 6	12K	
<u>H4/1</u>	Left front door speaker group	19L	
<u>H4/1h1</u>	Speaker 1	20L	
<u>H4/1h2</u>	Speaker 2	18L	
<u>H4/1x1</u>	Left front door speaker group connector	18K	
<u>H4/2</u>	Right front door speaker group	22L	
<u>H4/2h1</u>	Speaker 1	22L	
<u>H4/2h2</u>	Speaker 2	21L	
<u>H4/2x1</u>	Right front door speaker group connector	21K	
<u>H4/9</u>	Left front speaker	27L	
<u>H4/9x1</u>	Left front speaker connector	27K	
<u>H4/10</u>	Right front speaker	29L	
<u>H4/10x1</u>	Right front speaker connector	29K	
<u>M11</u>	Automatic antenna (radio/telephone) (USA)	10L	
<u>N40/3</u>	Sound system amplifier	20A	
<u>R3</u>	Front cigar lighter (with ashtray illumination)	4L	
<u>R3e1</u>	Illumination	4L	
<u>W1</u>	Main ground (behind instrument cluster)	3E	
<u>W6</u>	Ground (left wheelhousing in trunk)	10G 26E	
<u>W12</u>	Ground (center console)	4G 15G 17E	
<u>X18</u>	Interior/taillamp harness connector (12-pole)	8G	B.1/4
<u>X30</u>	Accessory equipment connector block (5-pole)	17L	B.1/2
<u>Z7/16</u>	Circuit 30 connector sleeve (accessory equipment connector block)	16E	
<u>Z28/5</u>	Left front door speaker group connector sleeve (+ signal)	28G	
<u>Z28/6</u>	Left front door speaker group connector sleeve (- signal)	27G	
<u>Z28/7</u>	Right front door speaker group connector sleeve (+ signal)	30G	
<u>Z28/8</u>	Right front door speaker group connector sleeve (- signal)	29G	
<u>Z28/9</u>	Amplifier shielding connector sleeve	20D	
<u>Z28/10</u>	Receiver shielding connector sleeve	23D	
*U29	00.19-2000 Front axle VSS	0	
*U34	82.20-2000 Interior lighting	0	