

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	38L	PE54.30
<u>E1</u>	Fuse and relay box	2L 40G 45L	B.4
<u>F1f4</u>	Fuse 4	43G	
<u>F1f6</u>	Fuse 6	41G	
<u>F1f8</u>	Fuse 8	40G	
<u>F1f9</u>	Fuse 9	42F	
<u>F1f12</u>	Fuse 12	42F	
<u>F1fE</u>	Fuse E	1K 45K	
<u>F1fF</u>	Fuse F	2K 46K	
<u>K24</u>	CF relay module	41L	
<u>M27</u>	Left front ESA motor group (with memory)	7L	
<u>M27m1</u>	Fore/aft motor	8L	
<u>M27m2</u>	Rear raise/lower motor	13L	
<u>M27m3</u>	Front raise/lower motor	11L	
<u>M27m4</u>	Head restraint raise/lower motor	4L	
<u>M27m5</u>	Backrest fore/aft motor	6L	
<u>M28</u>	Right front ESA motor group (with memory)	61L	
<u>M28m1</u>	Fore/aft motor	62L	
<u>M28m2</u>	Rear raise/lower motor	58L	
<u>M28m3</u>	Front raise/lower motor	60L	
<u>M28m4</u>	Head restraint raise/lower motor	67L	
<u>M28m5</u>	Backrest fore/aft motor	65L	
<u>N32/1</u>	Left front ESA control module (with memory)	4A 12A 20A 28A 36A	
<u>N32/2</u>	Right front ESA control module (with memory)	46A 53A 61A 67A	
<u>N32/5</u>	Left seat proximity control module	24L	
<u>N32/6</u>	Right seat proximity control module	47L	
<u>N32/7</u>	Left backrest lock safety package	28L	
<u>N32/8</u>	Right backrest lock safety package	36L 49L	
<u>N32/9</u>	MSC control module (with memory)	44L	
<u>S17/3</u>	Left front door switch	25L	
<u>S17/4</u>	Right front door switch	50L	
<u>S52/1</u>	Left backrest lock switch (left seat)	32L	
<u>S52/1x1</u>	Left backrest lock switch connector (left seat)	31J	
<u>S52/2</u>	Right backrest lock switch (left seat)	30L	
<u>S52/2x1</u>	Right backrest lock switch connector (left seat)	30J	
<u>S52/3</u>	Left backrest lock switch (right seat)	33L	
<u>S52/3x1</u>	Left backrest lock switch connector (right seat)	33J	
<u>S52/4</u>	Right backrest lock switch (right seat)	34L	
<u>S52/4x1</u>	Right backrest lock indicator switch connector (right seat)	34J	
<u>S91</u>	Left front ESA switch group (with memory)	17L	
<u>S91e1</u>	Illumination	20L	
<u>S91s1</u>	Fore/aft switch	15L	
<u>S91s2</u>	Rear raise/lower switch	15L	
<u>S91s3</u>	Front raise/lower switch	17L	
<u>S91s4</u>	Head restraint raise/lower switch	17L	
<u>S91s5</u>	Backrest fore/aft switch	19L	
<u>S91s6</u>	Memory button 1 switch	14L	
<u>S91s7</u>	Memory button 2 switch	16L	
<u>S91s8</u>	Memory button 3 switch	18L	
<u>S91s9</u>	Memory store button switch	18L	
<u>S92</u>	Right front ESA switch group (with memory)	54L	
<u>S92e1</u>	Illumination	52L	
<u>S92s1</u>	Fore/aft switch	56L	
<u>S92s2</u>	Rear raise/lower switch	57L	
<u>S92s3</u>	Front raise/lower switch	55L	
<u>S92s4</u>	Head restraint raise/lower switch	55L	
<u>S92s5</u>	Backrest fore/aft switch	53L	
<u>S92s6</u>	Memory button 1 switch	57L	
<u>S92s7</u>	Memory button 2 switch	56L	
<u>S92s8</u>	Memory button 3 switch	54L	
<u>S92s9</u>	Memory store button switch	53L	
<u>W1</u>	Main ground (behind instrument cluster)	41H	
<u>W18</u>	Ground (left front seat crossmember)	2E 21H 27E	
<u>W19</u>	Ground (right front seat crossmember)	46E 49G 50G	
<u>X4</u>	Terminal block (circuit 30, fuse and relay box) (2-pole)	39J	B.1/4
<u>X6</u>	Terminal block (circuit 58d) (2-pole)	23E 51C	B.1/4
<u>X11/4</u>	Diagnostic test clutch	41F	B.1/5 B.1/15
<u>X18</u>	Interior/taillamp harness connector (12-pole)	38F	B.1/4
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	42F	B.1/4
<u>X54/6</u>	ESC connector (2-pole)	43H	B.1/4
<u>X55/3</u>	Left front seat connector block	30G	B.1/2
<u>X55/4</u>	Right front seat connector block	33G	B.1/2
<u>Z21/10</u>	Door contact connector sleeve (switched ground) (solder joint in harness)	51E	
<u>Z81/4</u>	Circuit 58d connector sleeve (FFS)	22E 52E	
*U27	15.00 Electrical system, engine	0	
*U34	82.20-2000 Interior lighting	0	
*U94	91.59 Roll-over bar	0	

