

Designation	Description	Coordinates	Reference
<u>E1</u>	Fuse and relay box	2L 5L	B.4
<u>E1f12</u>	Fuse 12	3K	
<u>E1f13</u>	Fuse 13	6K	
<u>E1f25</u>	Fuse 25	5K	
<u>E1fD</u>	Fuse D	2K	
<u>N25/5</u>	Front HS control module	5A 12A 20A	
<u>R13/1</u>	LF seat heater element	20L	
<u>R13/2</u>	LF backrest heater element	19L	
<u>R13/3</u>	RF seat heater element	22L	
<u>R13/4</u>	RF backrest heater element	23L	
<u>S51/1</u>	Left front seat heater switch	12L	
<u>S51/2</u>	Right front seat heater switch	16L	
<u>W12</u>	Ground (center console)	7H	
<u>X30</u>	Accessory equipment connector block (5-pole)	9L	B.1/2
<u>X55/3</u>	Left front seat connector block	18G	B.1/2
<u>X55/4</u>	Right front seat connector block	21G	B.1/2
<u>Z6/2</u>	Ground supply connector sleeve (solder joint in connector)	8E 21E	