

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	22L	PE54.30
<u>A11</u>	Instrument illumination rheostat	23L	
<u>E15</u>	Dome lamp (with shut-off delay and reading lamp)	10L	
<u>E17/1</u>	Left footwell entrance/exit lamp	11L	
<u>E17/2</u>	Right footwell entrance/exit lamp	15L	
<u>E1</u>	Fuse and relay box	1L 18L	B.4
<u>F1f2</u>	Fuse 2	18K	
<u>F1f14</u>	Fuse 14	17K	
<u>F1f16</u>	Fuse 16	18K	
<u>F1f17</u>	Fuse 17	1K	
<u>N2/4</u>	Seat belt warning module (USA)	3A 12A 20A 24A	
<u>N7</u>	Exterior lamp failure monitoring module	21L	
<u>N10/2</u>	Combination relay module (turn signal with trailer coupling, rear window defroster, wiper motor, ATA)	12L	
<u>N32/7</u>	Left backrest lock safety package	8L	
<u>N52</u>	Power soft top control module	6L	
<u>R3</u>	Front cigar lighter (with ashtray illumination)	24L	
<u>R3e1</u>	Illumination	24L	
<u>S1</u>	Exterior lamp switch	20L	
<u>S17/3</u>	Left front door switch	7L	
<u>S68/1</u>	Left front seat belt buckle switch (seat belt reminder)	4L	
<u>S68/1x1</u>	Left front seat belt buckle switch connector (seat belt extender/reminder)	3K	
<u>W1</u>	Main ground (behind instrument cluster)	2E	
<u>W12</u>	Ground (center console)	24H	
<u>W18</u>	Ground (left front seat crossmember)	4E 7H	
<u>X18</u>	Interior/taillamp harness connector (12-pole)	7E	B.1/4
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	3E	B.1/4
<u>X55/3</u>	Left front seat connector block	4H	B.1/2
<u>Z7/19</u>	Circuit 30 connector sleeve (fused)	12G	
*U134	00.19-2710 Circuit 61e voltage distribution	0	