

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	9L 13L	PE54.30
<u>A1e9</u>	Seat belt/backrest lock reminder lamp	12L	
<u>A1e29</u>	RB MIL	10L	
<u>F1</u>	Fuse and relay box	36L	B.4
<u>F1f8</u>	Fuse 8	36K	
<u>F20</u>	Rear auxiliary fuse box (trunk)	2L 23L	
<u>F20f4</u>	Fuse 4	2K 23K	
<u>K18/2</u>	Left front seat belt lock relay module	17L	
<u>K18/3</u>	Right front seat belt lock relay module	19L	
<u>M14/1</u>	Supply pump (CL/vacuum)	25L	
<u>N2/4</u>	Seat belt warning module (USA)	11L	
<u>N26</u>	ATA control module	27L 28L	
<u>N32/8</u>	Right backrest lock safety package	34L	
<u>N52</u>	Power soft top control module	40L 42L	
<u>N53</u>	RB control module (crash deployment)	4A 12A 20A 28A 36A 42A	
<u>N54</u>	RCL control module	30L	
<u>S52/3</u>	Left backrest lock switch (right seat)	31L	
<u>S52/3x1</u>	Left backrest lock switch connector (right seat)	31J	
<u>S52/4</u>	Right backrest lock switch (right seat)	33L	
<u>S52/4x1</u>	Right backrest lock indicator switch connector (right seat)	32J	
<u>S68/1</u>	Left front seat belt buckle switch (seat belt reminder)	15L	
<u>S68/1x1</u>	Left front seat belt buckle switch connector (seat belt extender/reminder)	14K	
<u>S68/8</u>	Right front seat belt buckle/belt lock switch	18L	
<u>S68/13</u>	Seat belt lock switch (child safety lock)	21L	
<u>S83/2</u>	Left rear axle switch (roll bar)	3L	
<u>S83/3</u>	Right rear axle switch (roll bar)	4L	
<u>S84</u>	Power soft top switch	38L	
<u>W1</u>	Main ground (behind instrument cluster)	16D	
<u>W17</u>	Ground (right rear seat)	3E	
<u>W18</u>	Ground (left front seat crossmember)	15D	
<u>W19</u>	Ground (right front seat crossmember)	18E	
<u>W24</u>	Ground (roll bar control module)	2E	
<u>X4/10</u>	Terminal block (circuit 30/30Ü/61e/87L) (6-pole)	23E	B.1/1
<u>X11/4</u>	Diagnostic test clutch	6K 8K	B.1/5 B.1/15
<u>X11/12</u>	Power soft top test connector	5E	B.1/3
<u>X18</u>	Interior/taillamp harness connector (12-pole)	35H	B.1/4
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	9H 12H	B.1/4
<u>X18/9</u>	Taillamp harness connector (ATA, RCL) (12-pole)	26H 29H	B.1/5
<u>X23</u>	RB solenoid valve connector (2-pole)	24H	B.1/6
<u>X35/15</u>	Module box/taillamp harness separation point	7H	B.1/18
<u>X55/3</u>	Left front seat connector block	15H	B.1/2
<u>X55/4</u>	Right front seat connector block	18H 31H	B.1/2
<u>X62/8</u>	Rear axle distributor connector	2H	B.1/2
<u>Y57/1</u>	RB deployment solenoid	24L	
*U136	00.19-2750 Circuit 61e voltage distribution	0	