

Designation	Description	Coordinates	Reference
<u>A1</u>	Instrument cluster	5L	PE54.30
<u>A1e15</u>	SRS MIL and control	5L	
<u>A45</u>	Horn/airbag clock spring contact	8H	
<u>A45x1</u>	Clock spring contact/airbag connector	8F	B.1/4
<u>F1</u>	Fuse and relay box	4L	B.4
<u>F1f12</u>	Fuse 12	4K	
<u>N2/2</u>	SRS control module	5A 12A 17A	
<u>R12/1</u>	Driver ETR squib	13L	
<u>R12/2</u>	Front passenger ETR squib	11L	
<u>R12/3</u>	Driver front AB squib	8L	
<u>R12/8</u>	Passenger airbag squib	10L	
<u>S68/3</u>	Left front seat belt buckle switch (restraint system)	16L	
<u>S68/4</u>	Right front seat belt buckle switch (restraint system)	18L	
<u>W26</u>	Ground (ETR control module)	6E 16E	
<u>X11/4</u>	Diagnostic test clutch	7G	B.1/5 B.1/15
<u>X11/20</u>	Diagnostic intermediate connector (ATA, RCL, SRS) (4-pole, modular cabling)	7E	B.1/22
<u>X18/3</u>	Interior/taillamp harness connector (8-pole)	5F	B.1/4
<u>X28/2</u>	SRS voltage supply connector (2-pole)	3F	B.1/4
<u>X28/8</u>	ETR connector (left seat plug connection) (2-pole)	13H	B.1/4
<u>X28/9</u>	Front passenger seat ETR connector (2-pole)	11H	B.1/4
<u>X55/3</u>	Left front seat connector block	15H	B.1/2
<u>X55/4</u>	Right front seat connector block	17H	B.1/2